


Anschlussleiste VABM-C8-12E-N14-...

FESTO

Festo AG & Co. KG



Postfach
D-73726 Esslingen
++49/(0)711/347-0
www.festo.com

1. Teileliste

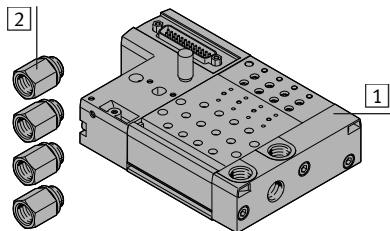


- 1 Anschlussleiste (1x)
VABM-C8-12E-N14-...
- 2 Adapter (4x)
AD-G1/4-1/4NPT-I

2. Vormontage

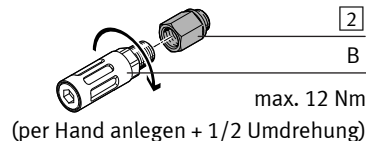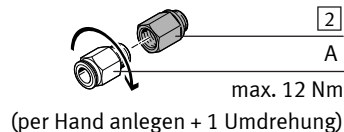

- Drehen Sie die QS-Verschraubung (A) in den Adapter 2 (≤ 17). Halten Sie das zulässige Anziehdrehmoment ein.
- Drehen Sie den Schalldämpfer (B) in den Adapter 2 (≤ 17). Halten Sie das zulässige Anziehdrehmoment ein.

3. Montage

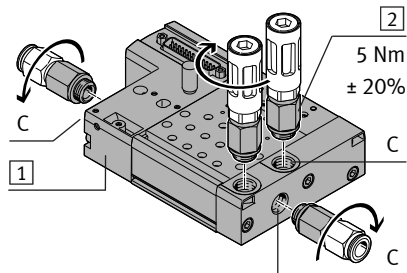

- Drehen Sie die Adapter 2 in die Gewinde (C) der Anschlussleiste 1 (≤ 17). Halten Sie das zulässige Anziehdrehmoment ein.


Manifold rail VABM-C8-12E-N14-...

FESTO

Festo AG & Co. KG



Postfach
D-73726 Esslingen
++49/(0)711/347-0
www.festo.com

1. Parts list

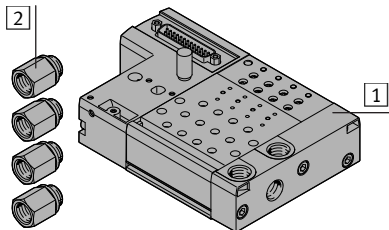


- 1 Manifold rail (1x)
VABM-C8-12E-N14-...
- 2 Adapter (4x)
AD-G1/4-1/4NPT-I

2. Preassembly

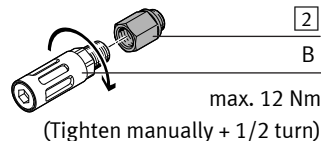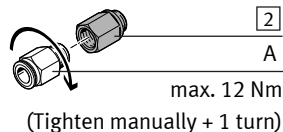

- Screw the QS fitting (A) into the adapter 2 (≙ 17). Observe the permitted tightening torque.
- Screw the silencer (B) into the adapter 2 (≙ 17). Observe the permitted tightening torque.

3. Assembly

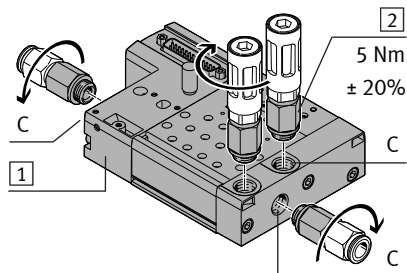

- Screw the adapter 2 into the thread (C) of the manifold rail 1 (≙ 17). Observe the permitted tightening torque.